



# Step-by-step instructions


## Battery change for calibrators

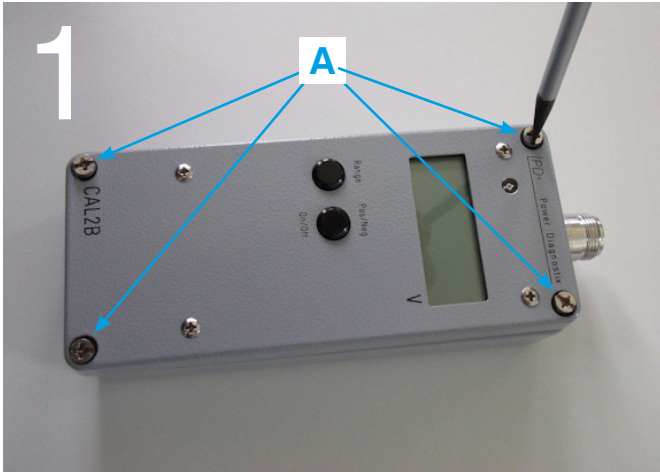


Release the four screws (A) in the corners of the calibrator's front.

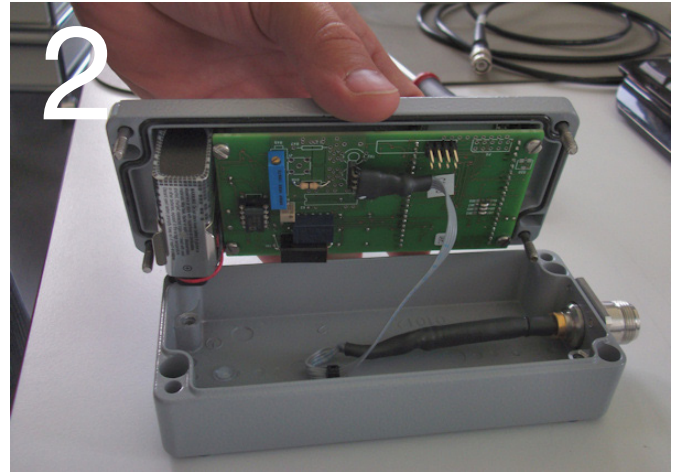

Open the calibrator's enclosure carefully.

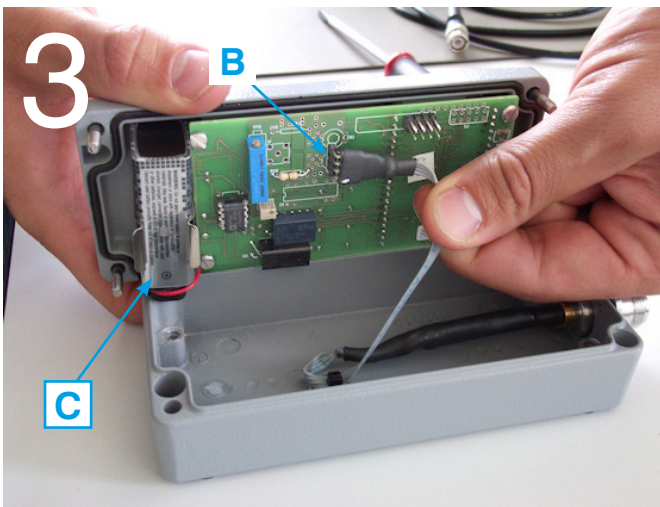

Disconnect the four pin connector (B) of the calibrator's output by slightly pulling it.

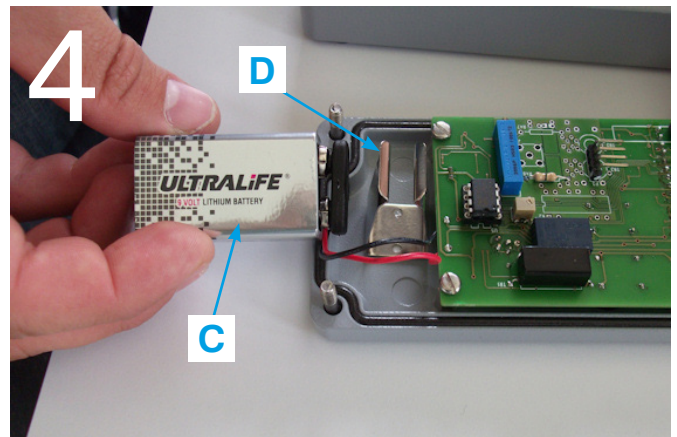

Remove the battery (C) carefully out of its fixture (D).