

Megger[®]

OTS60SX/2
Semi Automatic Oil Test Set

User Guide

Contents

Safety Warnings	3
General Description	4
Preparing the Oil Test Set	5
Operation	5
Oil Sampling	5
Preparing the Oil Test Vessel	5
Control Panel	6
Breakdown Testing	6
Withstand Testing	6
Warning messages	7
Testing to National Standards	7
Sampling and Testing Oil for Dielectric strength	8
Oil Testing Specifications	10
Test Set Specification	11
Accessories	12
Repair and Warranty	13

SAFETY WARNINGS

- Safety warnings and precautions must be read and understood before the instrument is used. They must be observed during use.
- The oil test set must be properly earthed.
- The test chamber must be kept scrupulously clean.
- If the test chamber cover is cracked or damaged in any way the test set must not be used, but sent for repair to an authorised agent.
- The chamber door hinges are fitted with earth contact springs. These must not be damaged or corroded.
- The correct type of oil test vessel must be used, and correctly positioned on the support horns before carrying out any testing.
- Replacement fuses must be of the correct type and rating.

NOTE

**THE TEST SET MUST ONLY BE USED BY SUITABLY TRAINED AND COMPETENT PERSONS.
TO PREVENT DAMAGE DO NOT TRANSPORT INSTRUMENT WITH TEST CELL FITTED IN TEST CHAMBER.**

WEEE DIRECTIVE



The crossed out wheeled bin symbol placed on Megger products is a reminder not to dispose of the product at the end of its life with general waste.

Megger is registered in the UK as a Producer of Electrical and Electronic Equipment. The Registration No is WEE/HE0146QT

For further information about disposal of the product consult your local Megger company or distributor or visit your local Megger website.

Symbols used on the Test Set



Caution: Refer to accompanying notes.



Risk of electric shock.



Equipment complies with relevant EU Directives


General Description

The **OTS60SX/2** is a lightweight, semi-automatic, oil dielectric strength test set. The instrument is suitable for protected field use and can be powered from a range of mains supplies. The maximum 60 kV output allows tests to be performed on oil from a wide variety of electrical installations including transformers, circuit breakers and other equipment. The operation of the test set is extremely simple and the results are displayed on a bright LED display. A selection of vessels enables the instrument to be configured for a variety of tests.

The semi automatic operation allows all types of testing to be performed. An automatic one minute timer operates when the high voltage is paused for Withstand (proof) testing. Oil samples can also be tested according to breakdown specification by using a suitable sequence of tests.

The instrument is constructed in a strong, sheet steel case. Handles are provided for ease of transportation. A pouch is located on the side of the instrument to contain accessories such as the power cord, additional electrodes and the spacing gauge. An optional carrying case incorporates a shoulder strap.

A number of vessels are available suitable for testing to a wide range of national specifications. Three types of electrode are available; spherical (IEC type), mushroom (VDE/ASTM D1816) and cylindrical (ASTM D877). The oil sample can be stirred by a motor driven impeller available in selected vessels. The vessel is located in the top of the instrument and covered by a transparent polycarbonate door with a mesh screen so that the oil breakdown can be viewed. A safety interlock ensures that the high voltage is disconnected when the chamber door is opened.

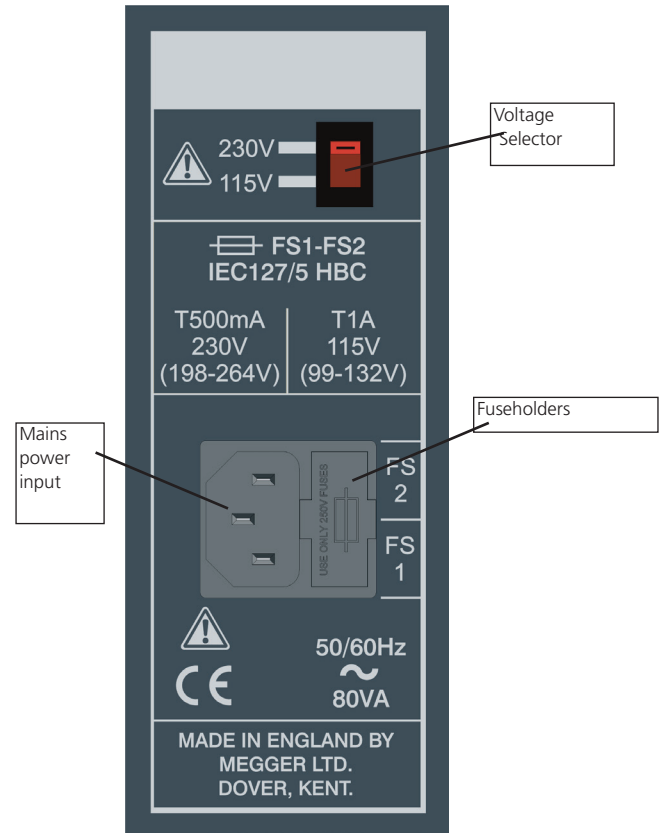

Mains Input Panel

Preparing the Oil Test Set

Ensure that the instrument is properly earthed. The test set must be connected to a socket (receptacle) with a protective earth (ground) conductor.

Before connecting the instrument to the mains power supply, ensure the voltage selector located on the mains input panel is set to the required voltage. The correct fuse value should be fitted for the supply voltage (See Specification). The fuse holders are located next to the supply inlet.

Power cord

If the power cord plug is not suitable for your type of socket outlets, do not use an adaptor. You should use a suitable alternative power cord, or if necessary change the plug by cutting the cord and fitting a suitable plug.

The colour code of the cord is:

Earth (Ground)	Yellow / Green
Neutral	Blue
Phase (Line)	Brown

If using a fused plug, a 3 Amp fuse to BS 1362 should be fitted.

Note: A plug severed from the power cord should be destroyed, as a plug with bare conductors is hazardous in a live socket outlet.

Operation

Oil Sampling


The relevant test specification will give advice on the best methods to use when sampling oil. Contamination of the oil may lead to misleading results. Always run off a small amount of oil before sampling and ensure that the flow of oil is steady.

Preparing the Oil Test Vessel

Optional vessels are available for testing to national specifications (See table and Accessories). Some specifications require stirring of the oil sample as well as different test electrode shapes. Once the correct vessel has been chosen for the required test the electrode gap should be set. This is achieved by adjusting the threaded nut on the side of the vessel. Small adjustment of the gap can be made by hand tightening the nuts and rotating the spindle. A slot is provided on the end of the spindle for this purpose.

A set of individual 0,5 mm feeler gauges is provided for accurate measurement of the gap. Gauges can be combined to measure from 1 mm to 4 mm. (see page 12)

Clean the vessel in accordance with the instructions given in the relevant test specification. Allowing space for the lid to be fitted, fill the vessel with the oil sample. The amount of oil required will depend upon the type of lid used. Load the vessel in the test chamber, connecting the motor power cable, if fitted, and carefully shut the door so that the safety interlock switch operates.

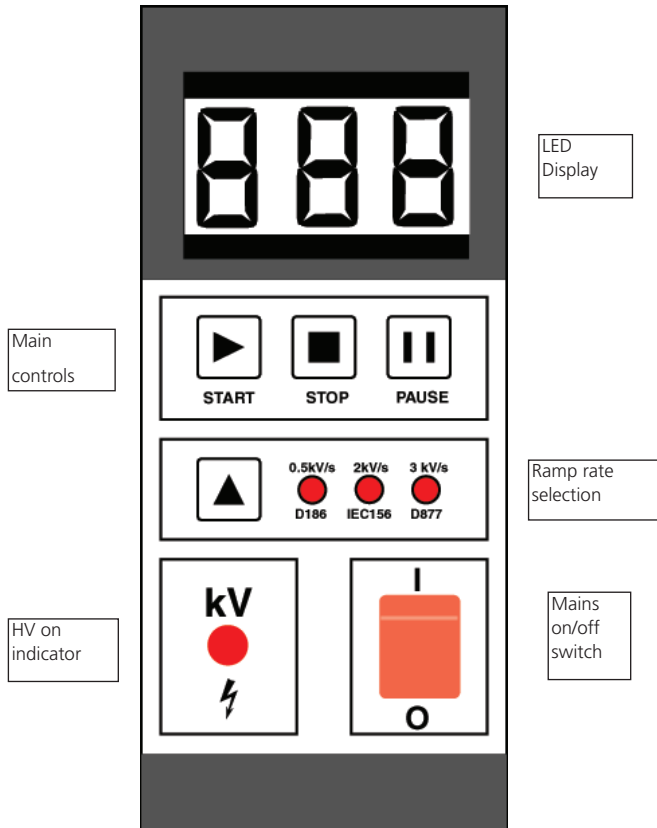

Control Panel

Control Panel

The control panel contains the supply on/off switch, the high voltage display, voltage ramp rate selection and the three control keys. The operation of the instrument is very simple. When the instrument is turned on, the on/off switch is illuminated, and the software edition code will be flashed up on the display.

Breakdown Testing

The suitable ramp rate for the test to be performed should be selected using the '▲' key. The **START** key '▶' will then turn on the high voltage. The red H.V. indicator will light to show the output voltage is on. The voltage will then increase at the selected ramp rate and the corresponding value will be shown on the display. If oil breakdown occurs the instrument will detect this and immediately shut off the high voltage. The breakdown voltage value will be left on the display until the next test is started. If no breakdown occurs, the high voltage will rise to 60 kV. At this point the test voltage is cut off and this maximum value left on the display.

A test can be stopped at any time by pressing the **STOP** '■' button. This will remove the high voltage from the oil sample and leave the display at **0,0 kV**.

Withstand Testing

A Withstand (proof) test can be carried out by pressing the **PAUSE** '||' key. This will maintain the high voltage at the current value for one minute. After this time the high voltage will continue to rise until one of the following:-

- 1) Oil breakdown occurs
- 2) The **STOP** '■' key is pressed
- 3) The output voltage reaches the maximum value of the test set.

During withstand testing the ramp rate can be changed while the pause is in progress. This can allow the withstand test value to be accurately set by adjusting the ramp rate to the lowest value.

Warning Messages



If the instrument overheats, the words 'Too Hot' will be alternately displayed and the operation disabled. This will reset automatically, when cooled, after a few minutes.

Testing to National Standards

The **OTS60SX/2** can be used to test to any international standard. A table of the standards is given on page 10. To perform these tests it is necessary to select the correct vessel so that the specified electrodes and suitable stirring are used. Most standards require repetitive breakdown tests to be carried out and the average taken. Note that sometimes the first breakdown result is omitted from the average calculation. If continuous stirring is not required the stirrer motor supply can be disconnected when appropriate by opening the chamber door.


100 ml Oil Test Vessel

The D877 Low Volume Test Vessel is an optional accessory for use with the Megger® **OTS60SX/2** Oil Test Set.

The test vessel must be kept scrupulously clean. Before each use, dismantle the test vessel, clean and dry, re-assemble, and set the electrode gap to 2,54 mm (0.100 inch).

Dismantling the vessel

1. Loosen both white locking screws.
2. Hold each electrode in turn, and unscrew, and remove the sliding arm from each electrode.
3. Remove both electrodes from the vessel.
4. Wash hands, and clean and dry the vessel as specified in ASTM D.877.

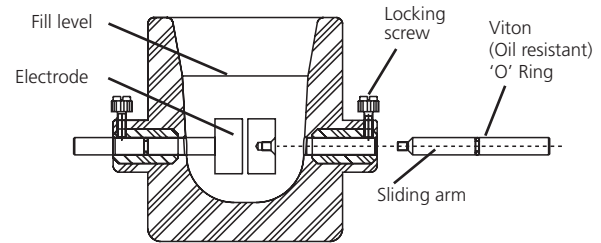

Re-assembling the vessel

1. With clean, uncontaminated hands, place the cleaned electrodes in the vessel.
2. Position each electrode in turn with the fingers, and screw in a sliding arm through the vessel into the each electrode in turn.
3. Centre the electrodes, and set the gap, using the appropriate gauge.
4. Ensuring that the Viton 'O' rings are not fouled, hand tighten both locking screws.

Megger Limited also supply a range of automatic oil test sets. These have the parameters of a wide range of specifications programmed into the instrument for unattended operation.

Sampling and Testing Oil for Dielectric Strength

The following notes should be read in conjunction with the relevant oil testing specifications.

Causes of Bad Oil

Transformers and switchgear oil may be rendered unsuitable for further use due to four main reasons:-

1. Low dielectric strength.
2. High acidity.
3. High sludge content.
4. Excessive free water content.

Low dielectric strength may result from many causes, the most common of which is foreign particles or fibres and water in combination. Individually their effect may be relatively small, but together a contamination of only a few parts in a million can cause considerable lowering of the breakdown voltage of the oil. High acidity, sludge and free water should not be tolerated, but will not necessarily reduce the dielectric strength below acceptable or specified levels.

Appearance of the Sample

Only an experienced person can judge the condition of an insulating oil from its appearance, but a general guide may be obtained from the following observations:-

5. A cloudy appearance may indicate that sludge has been formed.
6. A dark yellow colour could be a sign of overheating.
7. A blackish colour often results from an arc having taken place with either carbonisation of the oil or of the insulation within the equipment.
8. A green colour may be due to copper salts dissolving in the oil.

Cleanliness of the Apparatus

The necessity for scrupulous cleanliness in the apparatus and during the process of sampling, cannot be over emphasised. The measurement of the dielectric strength of the sample is as dependent on the cleanliness of the test cell and the sampling apparatus as the condition of the oil itself.

After cleaning the apparatus, it should under no circumstances be wiped, dried or even handled with a dusty or fibrous cloth as loose dust or fibres are liable to cause contamination.

Precautions Necessary During Sampling

Since the oil taken from a drain cock will inevitably contain an excess of settled out solid impurities, and will not necessarily be representative of the bulk of the oil, it should be run to waste until clear.

Always run off a quantity of oil into a glass bottle or a test tube for an initial check on the appearance of the oil. Attention to this point may prevent contamination of a clean test vessel.

If necessary, thoroughly clean and dry the sample point using a suitable solvent. Any cloth used should be lint free. Open the sample cock and drain to waste enough oil to ensure that the sample cock is fully flushed and the sample is representative of the bulk of oil to be tested. This quantity will depend upon the size of the transformer or main container. About 2 litres is usually suitable.

When sampling from a drum or supply container, the oil should flow at a steady rate into the test vessel and after being swilled around the sides it should be discarded. Without altering the rate of flow of the oil the quantity required for the test should then be run off while taking extreme care to prevent the ingress of atmospheric dust, cloth fibres or moisture.

Do not use a syphon. In the absence of a usable sample point, use a 'thief'.

Shield the sample from direct light until ready to be tested.

Turbulence and air bubbles should be avoided when pouring the oil. Relevant national specifications should be observed.

Particular care to prevent contamination is necessary when a test is to be made on a bulk delivery tanker, and on all occasions when a high value of dielectric strength is anticipated. The procedure suggested above should be rigorously applied.

Oil Testing Specifications

Test specification	Electrode shape	Electrode gap	Initial stand time	Rate of rise of voltage	Stir time	Stand time	Number of tests	Calculate average from test number
AS1767	A,B	2,5 mm	3 min	2 kV/s	1 min	1 min	6	1
ASTM D 877	C	2,54 mm	2 min 20 s	3 kV/s	-	1 min	5	1
ASTM D 1816	A	1 or 2 mm	3 min	0,5 kV/s	continuous	1 min	5	1
ASTM D 1816	A	1 or 2 mm	30 min	0,5 kV/s	continuous	1 min	5	1
<i>(when testing high fire point natural and synthetic esters)</i>								
BS 148	A,B	2,5 mm	3 min	2 kV/s	1 min	1 min	6	1
BS 5730a	A,B	various	-	2 kV/s	1 min	1 min	Withstand (proof) tests	
BS 5874	A,B	2,5 mm	3 min	2 kV/s	1 min	1 min	6	1
CEI 344	A	2,5 mm	3 min	2 kV/s	1 min	1 min	6	1
EN 60156	A,B	2,5 mm	5 min	2 kV/s	continuous/none	2 min	6	1
IEC 156	A,B	2,5 mm	5 min	2 kV/s	continuous/none	2 min	6	1
IP 295	A,B	2,5 mm	3 min	2 kV/s	1 min	1 min	6	1
IJIS C 2101	B	2,5 mm	3 min	3 kV/s	-	1 min	5 x 2	2
KSC 2101	B	2,5 mm	3 min	3 kV/s	-	1 min	5 x 2	2
NFC 27-131	A,B	2,5 mm	3 min	2 kV/s	-	-	1 x 3	1
NFC 27-221	A,B	2,5 mm	3 min	2 kV/s	1 min	1 min	6	2
rOCT 6581	A,B	2,5 mm	3 min	2 kV/s	1 min	1 min	6	1
SABS 555	A,B	2,5 mm	3 min	2 kV/s	1 min	1 min	6	1
STAS 286	A,B	2,5 mm	3 min	2 kV/s	1 min	1 min	6	2
UNE 21	A,B	2,5 mm	10 min	2 kV/s	1 min	1 min	6	2
VDE 0370	A,B	2,5 MM	3 min	2 kV/s	1 min	1 min	6	1



Specification

Output voltage	0 - 60 kV rms
Test Frequency	61,8 Hz
Transformer rating	500 VA
Output disconnection	Within 1 ms of detection of breakdown
Power supply	115 V (99 - 132 V), 230 V (198 - 264 V) (switch selectable) 50/60 Hz, 80 VA
Fuses	500 mA (T) HBC to IEC127/5 for 220/240 V supply 1 A (T) HRC to IEC 127/5 for 110/120 V supply Mains power cord fused plug (when applicable): 3 Amp to BS1362
Operation	Semi automatic with 0,5, 2 or 3 kV/s selectable rate of voltage rise Pause function with automatic 1 minute timer for Withstand testing
Display	0,0 - 60,0 kV LED digital display HV on LED Ramp rate LED
Measurement Accuracy	2% ± 3 digits
Controls	Start, Pause, Stop, Ramp Rate select and Power On/Off switch
Safety	The instrument meets the requirements of IEC 61010-1
EMC	In accordance with IEC 61326-1
Operational inaccuracies	Refer to www.megger.com
Temperature Range	Operating: 0 to 40 °C Storage: -20 to +70 °C
Humidity Range	Operating: 80% RH at 40 °C Storage: 93% RH at 40 °C, 95% RH at 25 °C
Dimensions	380mm (H) x 401mm (W) (w/o handles at 40mm each) x 260mm (D).
Weight	17 kg
Cleaning	Wipe disconnected test set with a clean cloth dampened with soapy water or Isopropyl Alcohol (IPA)

Accessories

Supplied with Instrument	Part Number
Spacing Gauge (0,5, 1,0, 1,5, 2,0, 2,5, 2,54 & 4mm)	6132-009
Accessory Pouch	6320-232
Fuses:	
2 x 500 mA (T) for 230 V supply (fitted to the instrument)	25950-014
2 x 1 A (T) for 115 V supply	25950-004
Mains lead (fit your own plug)	25424-860
Mains lead with US plug	25970-002
<u>Optional Accessories</u>	
Carrying Case	6420-106
Test Vessels	
0,5 l for IEC156 (spherical electrodes)	6320-233
0,5 l for IEC156 with stirrer (spherical electrodes)	6320-236
0,5 l for VDE0370 (mushroom electrodes)	6320-234
0,5 l for ASTM D1816 with stirrer (mushroom electrodes)	6320-237
0.15 litre vessel with cylindrical electrodes for ASTM D 877	6111-356
<u>Spare electrodes for 0.5 L vessels</u>	
Spherical (12,7 mm, 0,5 in. dia.)	6220-484
Mushroom (36 mm dia.)	6220-580
Cylindrical (25,4 mm, 1 in. dia.)	6220-483
Cylindrical with 0,5 mm edge radius	6220-538

Repair and Warranty

The instrument circuit contains static sensitive devices, and care must be taken in handling the printed circuit board. If the protection of an instrument has been impaired it should not be used, and be sent for repair by suitably trained and qualified personnel. The protection is likely to be impaired if, for example, the instrument shows visible damage, fails to perform the intended measurements, has been subjected to prolonged storage under unfavourable conditions, or has been exposed to severe transport stresses.

New Instruments are Guaranteed for 1 Year from the Date of Purchase by the User.

Note: Any unauthorized prior repair or adjustment will automatically invalidate the Warranty.

Instrument Repair and Spare Parts

For service requirements for Megger Instruments contact:

Megger Limited **or** **Megger**
Archcliffe Road **Valley Forge Corporate Center**
Dover **2621 Van Buren Avenue**
Kent, CT17 9EN. **Norristown, PA 19403**
England. **U.S.A.**

Tel: +44 (0) 1304 502243 Tel: +1 (610) 676-8579
Fax: +44 (0) 1304 207342 Fax: +1 (610) 676-8625

or an approved repair company.

Approved Repair Companies

A number of independent instrument repair companies have been approved for repair work on most Megger instruments, using genuine Megger spare parts. Consult the Appointed Distributor / Agent regarding spare parts, repair facilities and advice on the best course of action to take.

Returning an Instrument for Repair

If returning an instrument to the manufacturer for repair, it should be sent freight pre-paid to the appropriate address. A copy of the Invoice and of the packing note should be sent simultaneously by airmail to expedite clearance through Customs. A repair estimate showing freight return and other charges will be submitted to the sender, if required, before work on the instrument commences.

Declarations of conformity

Hereby, Megger Instruments Limited declares that radio equipment manufactured by Megger Instruments Limited described in this user guide is in compliance with Directive 2014/53/EU. Other equipment manufactured by Megger Instruments Limited described in this user guide is in compliance with Directives 2014/30/EU and 2014/35/EU where they apply.

The full text of Megger Instruments EU declarations of conformity are available at the following internet address: megger.com/eu-dofc



Megger Limited

**Archcliffe Road Dover
Kent CT17 9EN ENGLAND
T +44 (0)1 304 502101
F +44 (0)1 304 207342**

Megger

**4271 Bronze Way, Dallas,
TX 75237-1019 USA
T +1 800 723 2861
T +1 214 333 3201
F +1 214 331 7399**

Megger

**Z.A. Du Buisson de la Couldre
23 rue Eugène Henaff
78190 TRAPPES France
T +33 (1) 30.16.08.90
F +33 (1) 34.61.23.77**

OTHER TECHNICAL SALES OFFICES

Toronto CANADA, Sydney AUSTRALIA, Madrid SPAIN, Mumbai INDIA, and the Kingdom of BAHRAIN.

Megger products are distributed in 146 countries worldwide.

This instrument is manufactured in the United Kingdom.

The company reserves the right to change the specification or design without prior notice.

Megger is a registered trademark

OTS60SX2_UG_en_V03 07/2016

www.megger.com